Intelligent Mop Cleaner

Model No. M988

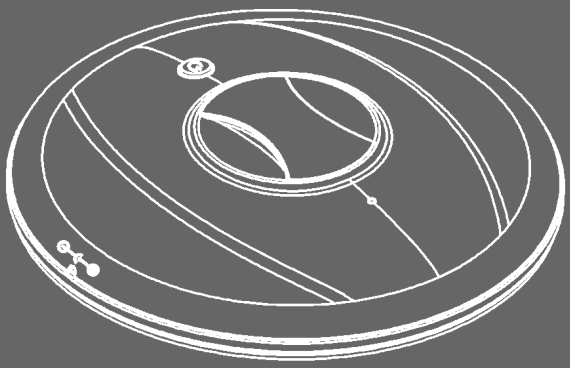

USER'S MANUAL

Please follow the rules carefully in order to prevent any harm to you and your property. The following signs mean:

Warning Breaking the rules may lead to serious physical injury.

Notice Breaking the rules may lead to slight harm or product destruction.

Warning

Except the maintenance technical expert, nobody is allowed to disassemble, maintain or chang this product.	Only the adapter provided by us can be used, otherwise, it may lead to product destruction, electric shock or fires.
Don't touch the wire when your hands are wet, otherwise, it may lead to electric shock.	Don't bend the wire strongly or put the heavy things on it, otherwise, it may destructlon to the wlre or electlc shock or fires.

Notice

To check if the adapter is connected correctly with the socket, otherwise, it may cause fires.	The DC jack should be fixed firmly, otherwise, it may lead to short circuit, smoke or fires.
Children are not allowed to use the product.	Don't sit or stand on the machine.
Don't use the machine in public.	Don't use the machine on the desk or chair.
The machine is not for outdoor use.	

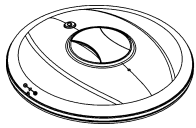

Intelligent mop cleaner

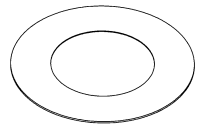

Cleaning Cloth/Cotton Paper



Charger

Battery

Sprinkling Can

User's Manual

The Detailed Names of Various Parts

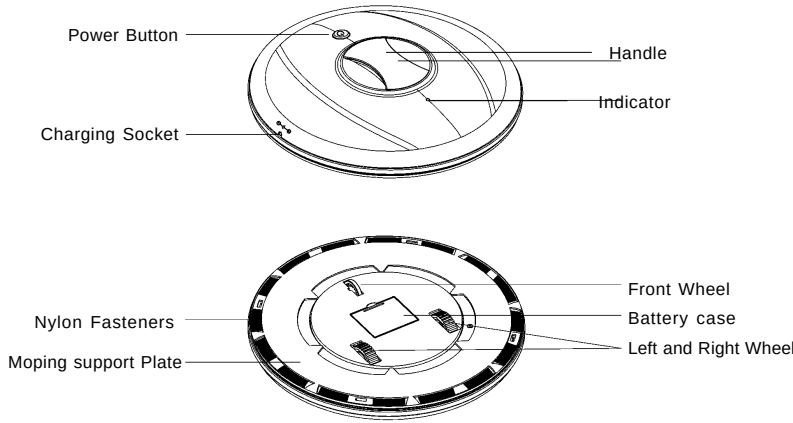

Charging

1. Insert the plug into the power socket (see ①).
2. Insert the plug into the socket of the machine (see ②) and the indicator will flicker.
3. The charging time is 6~8 hours.

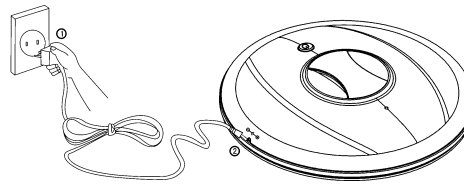

Install the Battery

1. Shut down the machine
2. Open the battery door (see Chart 1 and 2).
3. Insert three original AA batteries in accordance with the positive polarity and negative polarity inside the battery holder. Where the original battery is damaged, please purchase the AA 1.2V 1000mA rechargeable batteries for replacement.
4. At last insert the two clamps on the battery door into the recess of the robot and mount the battery doo

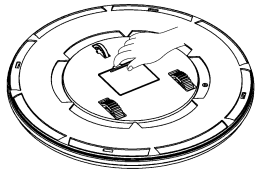

Chart 1

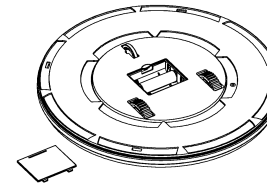

Chart 2



1. Charging the non-rechargeable battery is prohibited.
2. Please take out the battery without fail if the machine is abandoned.
3. Please power off the machine without fail before taking out the battery.
4. The battery must be recovered for safe treatment. Improper discarding is not allowed.

Installation and Dismounting of Cleaning Cloth/Cotton Paper

1. Please put down the cleaning cloth/cotton paper with the mopping support plate after alignment (as shown in the chart).
2. Please press the nylon fastener on the cleaning cloth/cotton paper with the mopping support plate so as to fix the cleaning cloth/cotton paper.
3. Tear it down with two hands on dismounting it.
4. The cleaning cloth/cotton paper can be reused many times after washed.
5. The washed cleaning cloth/cotton paper can be mounted for use after being dried.
6. This machine is equipped with two kinds of cleaning cloth and one kind of cotton paper. The two thicker one is used for mopping the floor and the thin one for polishing

Polish cloth(yellow)

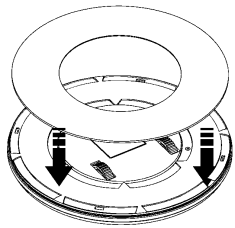

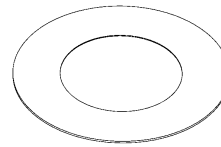

cleaning cloth (pink)

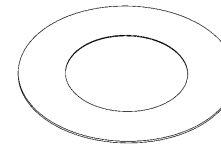

cotton paper(white)

The indicator of the mop cleaner will flicker and beep once two seconds after the battery is installed, which means it has finished self-inspection and begins to enter the operation-waiting state.

II. Operation

A. Floor-mopping mode: **please select this mode when you want to wipe the dust on the floor.**

1. Select the pink cleaning cloth or white cotton paper and mount it on the mop cleaner. Afterwards place the machine in the area ready to clean.
2. Press the Power button and the machine will be started to enter the floor-scrubbing mode. As shown in Chart 1, the mop cleaner star to work with the movement route of zigzag line, it will turn automatically after running 2-4 meters if no any obstacle; but if it meets the obstacles it will turn at once. The movement route can reach the maximum working area, which is shown as below :

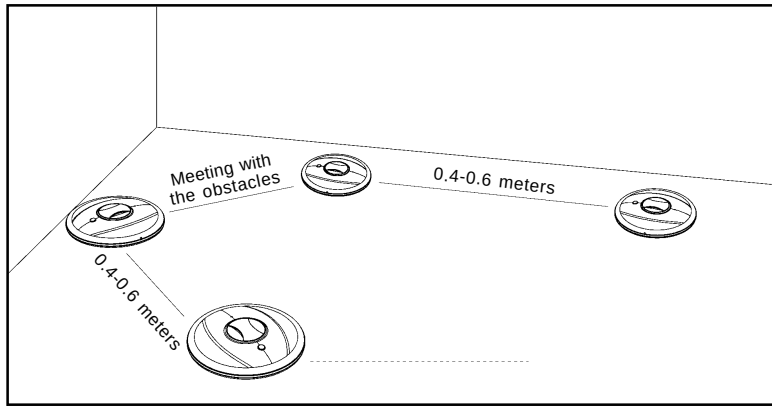

When it is hard to remove the stubborn stains on the floor, please spray an appropriate amount of detergent at the place with stains by use of the sprinkler or mop the floor with the wet cleaning cloth.

B. Polishing mode: Please use this mode when you want to polish the floor.

1. Before polishing , please clean and dry the floor without .
2. Spray the liquid wax evenly on the correct area of the floor with the sprinkler can and mount the polishing cloth on the machine.
3. Press the Power button on the machine 3 seconds until the power indicator lights and beeps. At this time the machine will enter the waxing mode for work. It polishes the floor in the straight-line mode plus the rotary-polishing mode as shown in Chart 2.

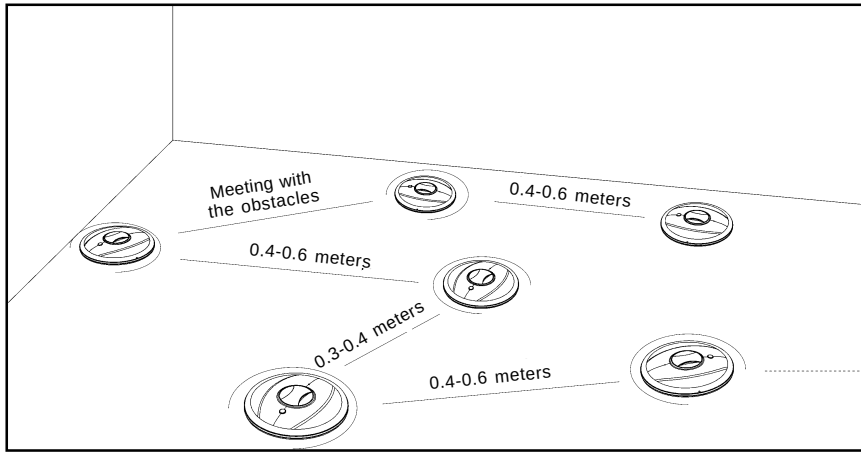

III. Shutdown

1. When the machine doesn¡¯t continue work after finishing the specified work, please press the Power button on the cover of the machine and the indicator will go out and the machine stop working.
2. Please clean this machine and wash the cleaning cloth after using.

IV. Troubleshooting :

The machine will automatically stop working in the following circumstances:

1. Low battery level: the power indicator will flicker to remind the battery level is low. Delay in charging in time will cause automatic shutdown of the machine.
2. The machine is lifted up: When the machine is lifted or laid aside by the obstacle above 15 seconds, it will stop. Please put it the floor and restart it.
3. The machine will automatically recede to free itself if it is clamped under the sofa. If it is clamped or can¡¯t move for above15 seconds, it will stop. Please remove the obstacles and restart the machine.

Model	M-988
Color	Red/White/Black
Size	Diameter: 29cm; Height: 6cm
Weight	1kg
Speed	17cm/Sec.
Charging Time	6-8h
Using Time	60min
Noise Level	58dB
Input	5V=400mA
Rated Power	5W
Place of Origin	China